

Fig.2

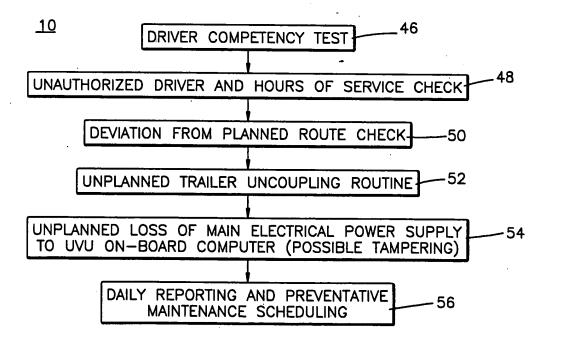
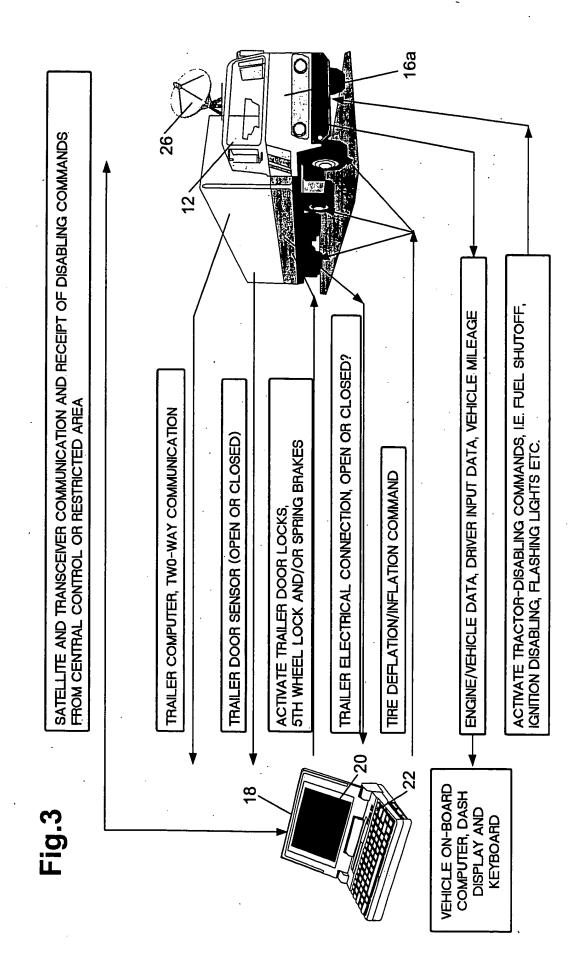


Fig.6







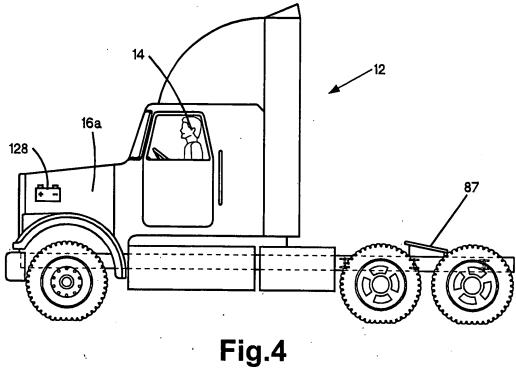



Fig.4

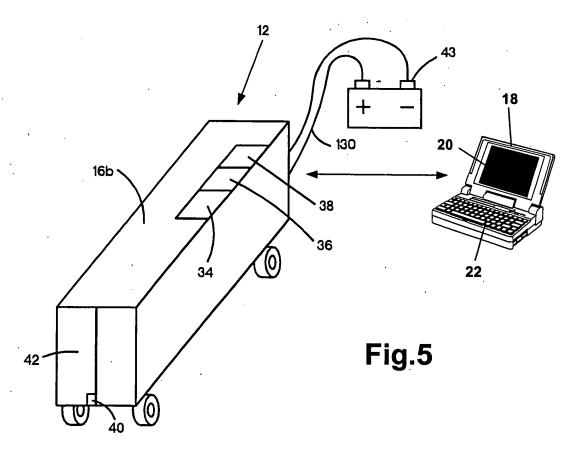


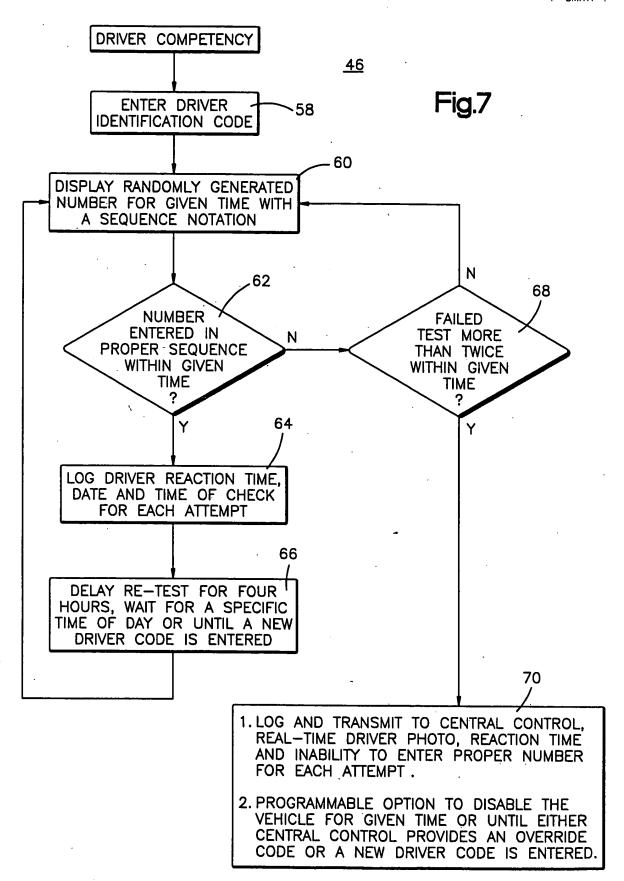

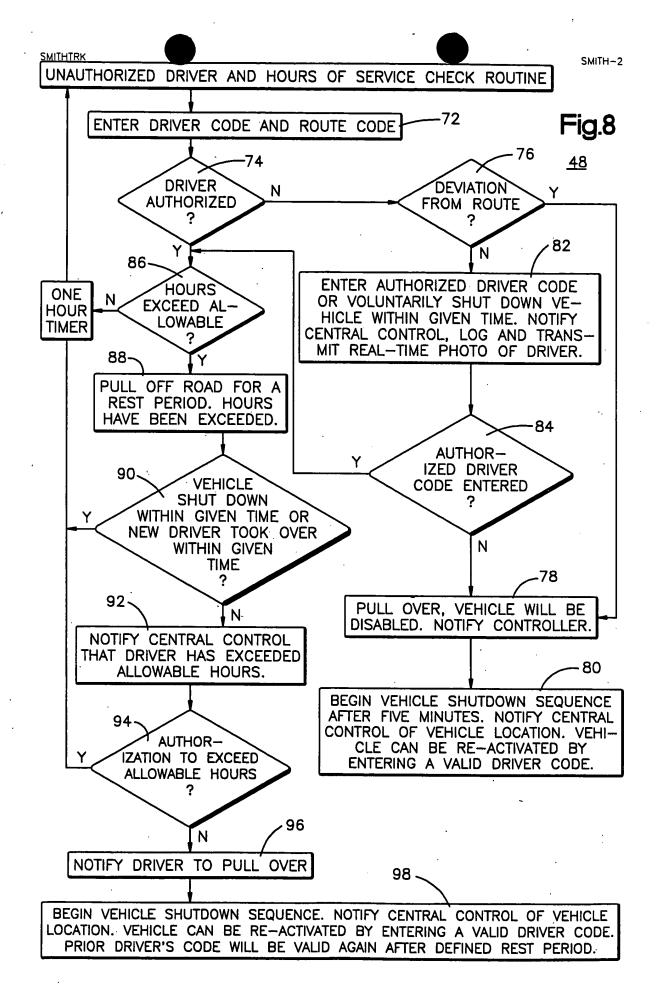

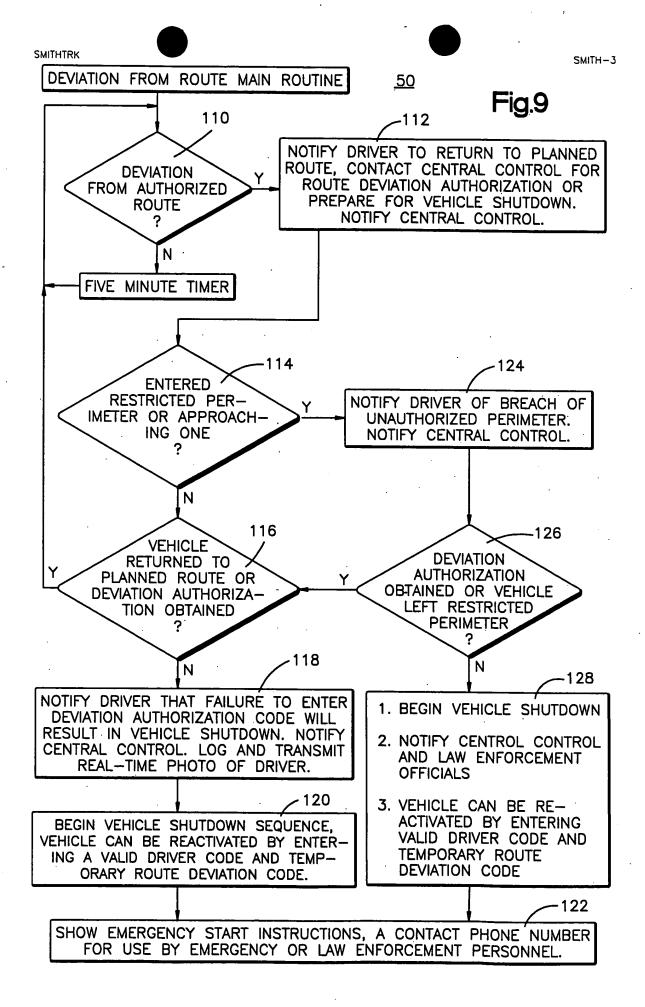

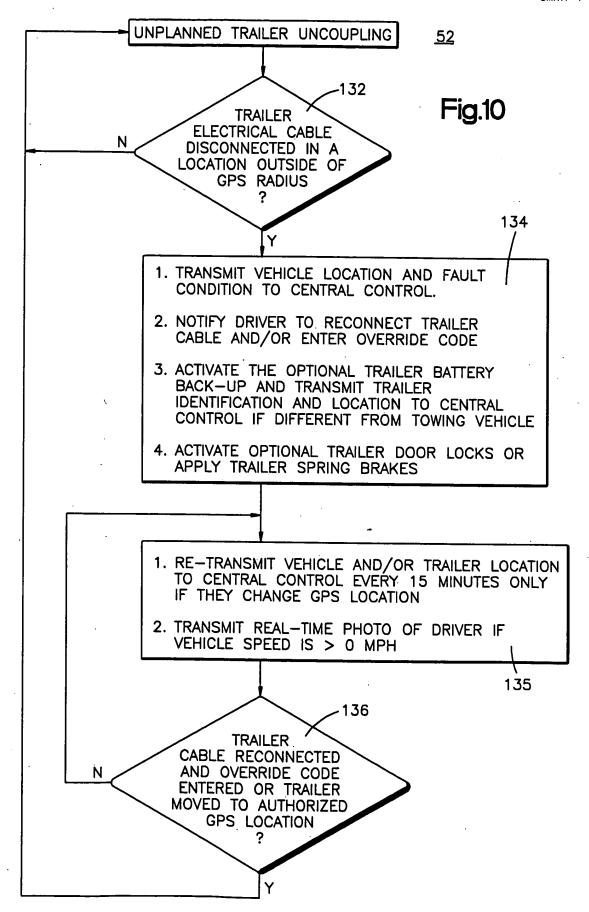

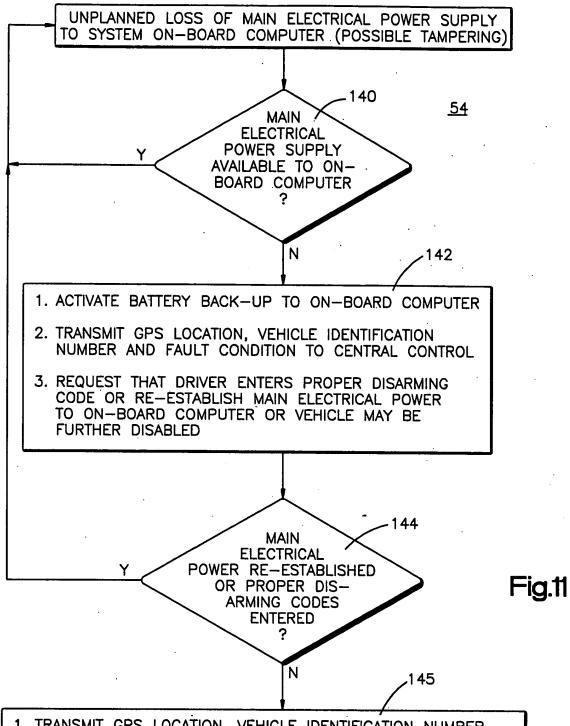

- 1. TRANSMIT GPS LOCATION, VEHICLE IDENTIFICATION NUMBER, REAL—TIME PHOTO OF DRIVER AND FAULT CONDITION TO CENTRAL CONTROL IF VEHICLE LOCATION CHANGES
- 2. IF THE VEHICLE OWNER HAS PROGRAMMED THE DISABLING FEATURE, IT WILL NOW BE ACTIVATED
- 3. SYSTEM CAN BE RESET BY RE-ESTABLISHING UVU COMPUTER POWER OR OVER RIDDEN BY ENTERING DISARMING CODE

